



---

**INSTRUCTIONS FOR USE**  
FREEZER  
EN

RBF276SND1  
RBF276DND1

# Contents

<b>Introduction</b> .....	<b>3</b>	Adjusting the temperature in the appliance .....	13
Welcome to our growing ASKO family! .....	3	Intensive freezing (super freeze) function ....	13
<b>Important notes and precautions</b> .....	<b>4</b>	Eco function .....	14
Before using the appliance for the first time .....	4	Party mode .....	15
Important safety instructions .....	4	Sabbath function (Sabbath mode) .....	16
Important information on the use of appliance .....	6	Wi-Fi function .....	16
<b>Installation and connection</b> .....	<b>8</b>	High temperature alarm .....	17
Selecting the location .....	8	Open door alarm .....	18
Connecting the appliance .....	9	Power outage/power supply failure alarm ....	18
Changing the side on which the door opens / building the appliance into a cupboard .....	9	<b>Storing and freezing food</b> .....	<b>19</b>
<b>Before using the appliance for the first time</b> .....	<b>10</b>	Avoid contamination of food .....	19
Before you use the appliance for the first time .....	10	Freezing and storing foods in the freezer ....	19
Energy-saving advice .....	10	Thawing frozen food .....	20
<b>Description of the appliance</b> .....	<b>11</b>	<b>Maintenance</b> .....	<b>21</b>
Ice cube tray (IceTray) .....	11	Defrosting the appliance .....	21
<b>Operating the appliance</b> .....	<b>12</b>	Cleaning the appliance .....	21
Control panel .....	12	<b>Faults</b> .....	<b>22</b>
Switching the appliance on/off .....	12	Faults table .....	22
		<b>Environmental aspects</b> .....	<b>24</b>
		Disposal of packaging and appliance .....	24
		<b>Compliance information</b> .....	<b>25</b>
		<b>Spare parts</b> .....	<b>26</b>

## Welcome to our growing ASKO family!

We are proud of our appliances. We hope that this appliance will be an appreciated and dependable aid for many years to come.

Please read the operating instructions before use. They include general tips, information about the settings and adjustments you can make, and the best way to take care of your appliance.

### WARNING!

**Read the safety instructions before using the appliance!**

**Read these instructions thoroughly before you first use the appliance, and keep the instructions for future use.**

### **Link to the EU EPREL database**

Information about your product can be found at [www.asko.com/energylabel](http://www.asko.com/energylabel), where you will also find a link to the European Product Database for Energy Labelling, EPREL. Or else visit <https://eprel.ec.europa.eu> directly. Follow the instructions to search by model name (see the information on the serial number plate).

The following symbols are used throughout the manual and they have the following meanings:

### INFORMATION!

Information, advice, tip, or recommendation

### WARNING!

Warning – general danger

### DANGER OF FIRE!

Warning; risk of fire / flammable materials

# Important notes and precautions

## Before using the appliance for the first time

Before connecting the appliance to the power mains, please read carefully the instructions for use which describe the appliance and its correct and safe use. The instructions apply to several appliance types/models; thus, settings or equipment may be described herein which is not available in your appliance. We recommend saving this instruction manual for future reference and attach it to the appliance if it is sold in the future.

Check for any damage or irregularities on your appliance. If you find your appliance is damaged, notify the retailer from which you have purchased the appliance.

Allow the appliance to stand upright for at least 4 hours before you connect the appliance to the mains. This reduces the risk of malfunctions resulting from transport effects on the refrigerant unit.

## Important safety instructions

 **DANGER OF FIRE!**

**WARNING!** Risk of fire/flammable materials.

The appliance must be connected to the power mains and grounded in compliance with the effective standards and regulations.

**WARNING!** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Before cleaning the appliance, unplug it from the power mains (unplug the power cord from the wall outlet).

 **ELECTRIC SHOCK!**

**WARNING!** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

 **ELECTRIC SHOCK!**

**WARNING!** When positioning the appliance, ensure the supply cord is not trapped or damaged.

 **ELECTRIC SHOCK!**

If LED lighting does not work, call a service technician. Do not attempt a repair of the LED lighting yourself, as there is danger of contact with high voltage!

## Important notes and precautions

### WARNING!

WARNING! Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

### WARNING!

WARNING! Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

### WARNING!

WARNING! To avoid any hazard resulting from poor stability of the appliance, make sure it is installed as instructed.

#### **Freeze burn hazard**

To avoid freeze burn, never put frozen food in your mouth and do not touch frozen food.

#### **Safety of children and vulnerable persons**

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Remove the packaging intended to protect the appliance or particular parts during transport and keep it outside the reach of children. It presents danger of injury or suffocation.

## Important notes and precautions

When removing a used appliance, disconnect the power cord, remove the door, and leave the shelves in the appliance. This will prevent children from locking themselves in the appliance.

### **For European markets only**

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

### **Warning regarding the refrigerant**

The appliance contains a small amount of an environmentally friendly yet flammable gas R600a. Make sure that no parts of the cooling system are damaged. A gas leak is not hazardous to the environment, but it could cause eye injury or fire.

In case of a gas leak, ventilate the room thoroughly, disconnect the appliance from the power mains, and call a service technician.

Important information on the use of appliance

**WARNING!** This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;

## Important notes and precautions

- catering and similar non-retail applications.

### WARNING!

**WARNING!** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

The appliance may not be used outdoors and it may not be exposed to rain.

**Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.**

If the appliance will be out of use for an extended period of time, switch it off using the relevant button, and unplug it from the power mains. Empty the appliance, defrost it, clean it, and leave the door ajar.

In case of an error or power supply failure, do not open the freezer compartment unless the freezer has not operated for over 16 hours. After this period, use the frozen food or provide sufficient cooling (e.g. a replacement appliance).

### **Technical information on the appliance**

Rating plate can be found in the appliance interior. It indicates data on voltage, gross and net volume, type and amount of refrigerant, and information on the climate classes.


If the language on the rating plate is not the language of your choice or the language of your country, replace it with the one supplied.

### WARNING!

**WARNING!** Do not damage the refrigerant circuit.

# Installation and connection

## Selecting the location

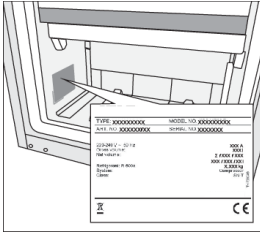

- Place the appliance in a dry and well aired room. The permitted ambient temperature range for the appliance depends on the appliance's climate class, which is shown on the type plate.

- Do not place the appliance near a source of heat, such as a gas cooker, radiator or boiler, etc., and do not expose it to direct sunlight.

Description	Class	Ambient temperature range °C	Relative humidity
Extended temperate	SN	+10 to +32	≤75%
Temperate	N	+16 to +32	
Subtropical	ST	+16 to +38	
Tropical	T	+16 to +43	

### WARNING!

Do not place the appliance in a room where the temperature can fall below 5 °C: the appliance may not work properly or become defective!

### WARNING!

The appliance is not suitable for outdoor use and it may not be exposed to rain.

- The appliance must be placed at a distance of at least 5 cm from an electrical or gas cooker and at least 30 cm from a radiator or heater. An insulation panel must be fitted when these distances cannot be kept.
- The appliance must be placed at least 5 cm away from the wall or the back of the cabinet. A kitchen cupboard above the refrigerator must have a gap of at least 5 cm between the back of the cupboard and the wall. This is needed to make sure that there is sufficient cooling air for the condenser.
- The plug of the installed appliance must remain accessible!

### WARNING!

Place the appliance in a room with a sufficient volume of air. The room must have a volume of at least 1 m<sup>3</sup> of air for every 8 grams of refrigerant. The quantity of refrigerant is shown on the type plate on the inside of the appliance.

# Installation and connection

- The kitchen unit in which the appliance is to be built in must have an opening of at least 200 cm<sup>2</sup> in its base to allow sufficient air to circulate.
- The appliance's air outlet is at the top. Make sure that the outlet is not blocked. Blocking the outlet can result in damage to the appliance.

## WARNING!

An anti-condensation accessory must be installed before built-in appliances are installed next to each other in a cupboard or surround. **For safety reasons, this must be installed by a recognized installer!**

## Connecting the appliance

- Connect the appliance to the power supply with a plug. The socket must be earthed. The nominal voltage and frequency required for the appliance are shown on the appliance's type plate/label with basic information.
- The appliance must be connected to the mains and earthed in accordance with the prevailing standards and regulations. The appliance can withstand small variations in the mains voltage to a maximum of plus or minus 6%.

## WARNING!

When you are not going to use the appliance for a longer period then switch it off with the appropriate key and disconnect it from the mains. Empty, defrost and clean the appliance, and leave the door ajar.

## WARNING!

In the event of a defect or power cut, do not open the freezer compartment unless the appliance has been out of operation for more than the hours indicated on the appliance's type plate (temperature rise time). After this time, you must either use the frozen food or make sure that it is properly cooled (for example, by transferring it to another appliance).

## Changing the side on which the door opens / building the appliance into a cupboard

Information about changing the side on which the door opens and building the appliance into a cupboard is enclosed in separate installation instructions.

# Before using the appliance for the first time

## Before you use the appliance for the first time

Do not connect the appliance to the mains until you have carefully read the instructions for the correct and safe use of the appliance. As these instructions are for various types and models, it is possible that the instructions for use refer to settings or parts that are not available on your appliance. We recommend that you keep these instructions for future use. If you sell the appliance, enclose them with the appliance.

Inspect the appliance for damage and/or irregularities. If the appliance is damaged, contact the store that sold you the appliance.

Allow the appliance to stand upright for at least 4 hours before you connect the appliance to the mains. This reduces the risk of malfunctions resulting from transport effects on the refrigerant unit.


Before using the appliance for the first time, the interior and all internal accessories should be cleaned with lukewarm water and a neutral cleaning agent. Wipe the cleaned parts with a cloth with clean water and then dry them thoroughly.

If you use the appliance for the first time, do not put food into the appliance until the temperature has decreased to the set temperature.

## Energy-saving advice

- Install the appliance as stated in the instructions for use.
- Do not open the door more than necessary.
- Never cover or obstruct the ventilation openings.
- Replace a door seal that is damaged or no longer seals properly as quickly as possible.
- Store food in well-sealed containers or suitable packaging.
- Allow food to cool to room temperature before you put it in the appliance.
- Defrost food in the refrigerator compartment.
- The lower the set temperature, the higher the power consumption.

# Description of the appliance

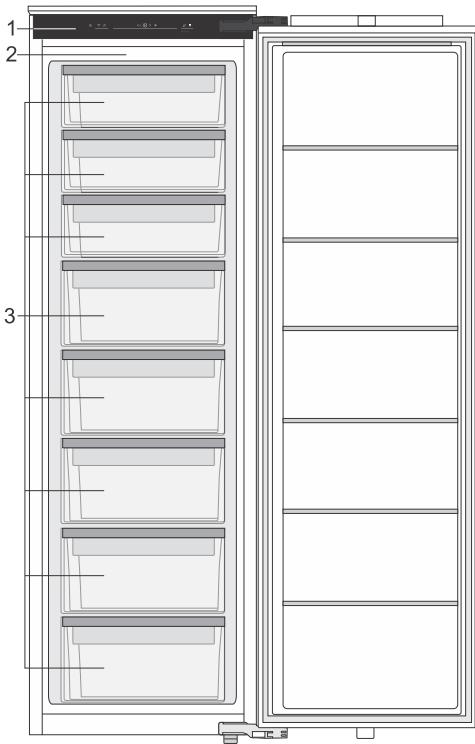

1. Control panel
2. NoFrost freezer unit
3. Freezer drawers

## NoFrost

With the NoFrost system, you no longer need to defrost the freezer.

## Ice cube tray (IceTray)




To make ice cubes, fill the tray with water and lay it horizontally in the freezer.

# Operating the appliance

## Control panel

### 💡 INFORMATION!

- For best results, touch the keys with as much of the fingertip as possible.

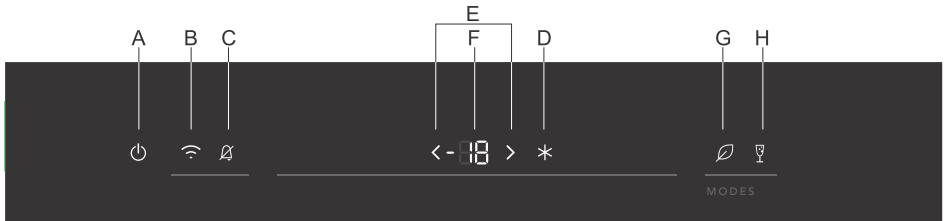

- A.** Appliance on/off key
- B.** WiFi function on/off key
- C.** Acoustic alarm off key


### Freezer

- D.** FastFreeze key (intensive freezing function)
- E.** Temperature setting keys
- F.** Set temperature display

### Special functions

- G.** Eco function on/off key
- H.** Party mode on/off key (Party Mode)
- G+H** Sabbath mode (switch 'On' or 'Off')

## Switching the appliance on/off

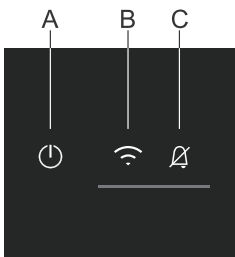

When you connect the appliance to the power mains for the first time, the appliance will be in standby mode (switched off, but powered).


**Switching on the appliance:** switch on the appliance by pressing **A**.

**Switching off the appliance:** switch off the appliance by pressing the **A** key and holding it (for 3 seconds). The appliance will switch to standby mode (it remains powered).


## Adjusting the temperature in the appliance


### INFORMATION!

- Appliance temperature is preset at the factory to the recommended setting, i.e. 4°C for the refrigerator compartment and -18°C for the freezer compartment.
- After the appliance is switched on, it may take several hours until the set temperature is reached. Do not place any food into the appliance before the temperature drops to the selected setting.

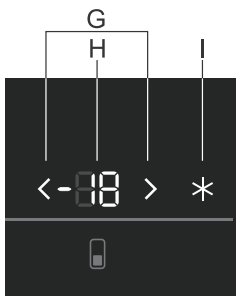

Temperature can be set with the keys **G**.

 Increase temperature

 Decrease temperature

- Temperature can be set in the range from -15°C to -26°C.
- Each time you press one of the keys **G** you increase or decrease the setting by 1 °C. After three seconds of inactivity, the setting is automatically saved as the last set temperature.
- Recommended temperature setting is -18°C.


## Intensive freezing (super freeze) function

This appliance has an intensive freezing function. This function decreases the temperature in the freezer compartment as quickly as possible. Activate this function 24 hours before you put a large quantity of fresh food in the appliance.

### WARNING!

When the intensive freezing function is selected, the appliance works at maximum capacity. It may then make more noise for a while.

# Operating the appliance

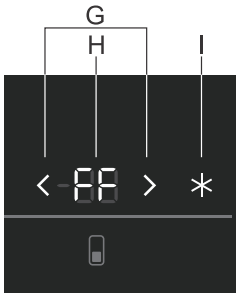

- Press and hold **I**.
  - The display shows »FF«, to indicate that the FastFreeze function is activated.
- To deactivate the function, press and hold **I**.
  - The display once again shows the set temperature.

## WARNING!

Adjusting the temperature of the freezer compartment while the intensive freezing function is activated will immediately disable the intensive freezing function.

## WARNING!

When the intensive freezing function is not manually disabled then the function will be automatically disabled after about two days. The temperature then returns to the latest set temperature.


## WARNING!

Should a power failure occur while the function is activated then the function will be activated again when the power is restored.

## Eco function

When the ECO function is selected, the appliance works with the optimum settings (freezer -18 °C). These settings are shown in the display. The ECO function has no time limit and remains activated until the function is disabled.

## Activating/disabling the ECO function

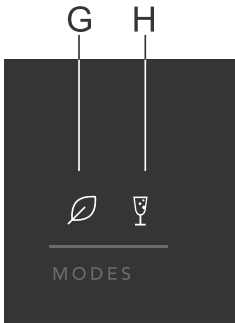

- Press and hold **G**.
  - The lighting of the touch key comes on: the function is activated.
- To deactivate the function, press and hold **G**.
  - The function is disabled.

### WARNING!


Activating the ECO function disables the FastFreeze function.

### WARNING!

Should a power failure occur while the ECO function is activated then the function will be activated again when the power is restored.

## Party mode

In Party mode, set all compartments to maximum cooling and freezing. Use this function when you want to freeze large amounts of food during the day.

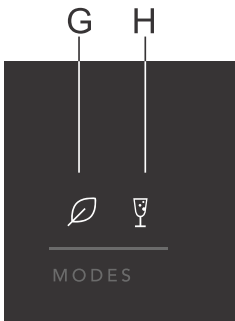

- Press and hold **H**.
  - The lighting of the touch key comes on: the function is activated.
  - **FF** will appear on the display **F**.
- To deactivate the function, press and hold **H**.
  - The function is disabled.

### WARNING!

Adjusting the temperature, while the Party mode is activated, will immediately disable the function.

# Operating the appliance

## WARNING!

When the Party mode is not manually disabled, the function will be automatically disabled after about 24 hours. The temperature then returns to the latest temperature setting.

## Sabbath function (Sabbath mode)

Sabbath mode is active for 72 hours after activation. All illuminated features and the display will be temporarily disabled. In the meantime, the appliance's cooling system is working normally.



- Press and hold **C** and **H**.
  - The touch keys will light up: the function is activated.
- To deactivate the function, press and hold **C** and **H**.
  - The function is disabled.

## WARNING!

If any error occurs during Sabbath mode, it won't be showed until Sabbath mode is deactivated.

## Wi-Fi function

You can control this device remotely with your smartphone. If the device is not connected to your home network, it functions in the same way as a conventional device.

### Connecting your appliance to the application **ConnectLife**



**ConnectLife** is a smart home platform that connects people, devices, and services. The **ConnectLife** application includes advanced digital services and carefree solutions that allow users to monitor and control appliances, receive notifications from a smartphone, and update software (supported features vary depending on your appliance and your region/country).

To connect your smart device, you need a home Wi-Fi network (only 2.4 GHz networks are supported) and a smartphone with the application **ConnectLife**.




To download the **ConnectLife** application, scan the QR code or search for **ConnectLife** in your favorite app store.

1. Install the **ConnectLife** application and create an account.
2. In the **ConnectLife** application, go to the "Add device" menu and select the appropriate type of device. Then scan the QR code (it can be found on the rating plate of the appliance; you can also enter the AUID/SN code manually).
3. The application then guides you through the entire process of connecting the appliance to your smartphone.
4. After a successful connection, the appliance can be operated remotely via the mobile application.

Do you have more questions? Visit us at [www.connectlife.io](http://www.connectlife.io) or contact us at [hello@connectlife.io](mailto:hello@connectlife.io).

## Cancelling all pairings

By activating this function, the appliance will be removed from all paired app user accounts.

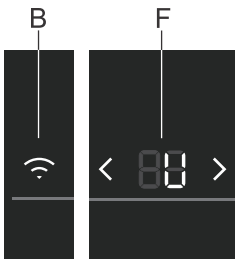

- Press and hold **B** for 9 seconds until the display **F** shows **U**.
- The function will terminate automatically after successful removal of all pairings in the cloud.

## High temperature alarm

A signal will sound when the temperature in the appliance is too high. The display **C** and **HI** on the display start to flash.

High temperature can be caused by several reasons:

- The door of the relevant compartment may have been opened for too long or too frequently.
- The door does not seal properly.
- Too much fresh food has been put in at the same time.

## WARNING!

Every time you switch on the appliance, a 24-hour delay in alarm operation is activated. If the appliance fails to reach a sufficiently low temperature after this period, the alarm will be activated.

## Stopping the alarm

1. Press **C**.
  - The acoustic alarm will go off. The current measured temperature of the compartment begins to flash on the display unit.
  - The next time you press **C** the set temperature of the compartment starts to flash and will continue to flash as long as the high temperature alarm is active.
  - When the appliance reaches an adequate temperature, the temperature display will stop flashing, and the display **C** will go out.

# Operating the appliance

## Open door alarm

An alarm signal sounds when a compartment door is open for too long. The following key lights up **C**.

### Stopping the alarm

1. Close the door.
  - The alarm will stop sounding.

## WARNING!

If you turn off the alarm only by pressing **C**, the alarm will switch on again after some time because the door is still open.

## Power outage/power supply failure alarm

If the temperature in the appliance reaches the alarm level during a power failure, then the high temperature alarm will be activated once power supply is restored. The alarm will sound and the display will flash **PF**.

### Stopping the alarm

1. Press **C**.
  - The acoustic alarm will go off. The current measured temperature of the compartment begins to flash on the display unit.
  - The next time you press **C**, you cancel the alarm after power failure.

If the high temperature alarm is activated at the same time, it will operate as described in the chapter High temperature alarm, after you have deactivated the power supply failure alarm.

## Avoid contamination of food

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

## Freezing and storing foods in the freezer

### **Important recommendations for freezing fresh food**

- The maximum quantity of food that you can put in the freezer in one go is stated on the type plate. Putting more than this maximum quantity of food into the freezer will slow the freezing process and reduce the quality. Moreover, this will also harm the quality of frozen food already stored in the freezer.
- Use only good-quality fresh food that is suitable for freezing.
- Allow hot food to cool to room temperature.
- Food needs to be frozen quickly. It is recommended that you use small packs.
- Use air and watertight packaging to prevent the food from drying out and lose its vitamins.
- Note the type and quantity of the food on the packaging, together with the date on which it was frozen.
- Do not allow fresh food to come into contact with frozen food.
- You can remove all the drawers to make use of the total volume of the freezer compartment.
- Put the food directly on a shelf and on the base of the freezer.

### **Freezing large quantities of fresh food**

- Activate the intensive freezing function 24 hours before you plan to freeze the food.
- Distribute the fresh food equally between all the drawers in the freezer compartment.
- After 24 hours, you can transfer the food to another compartment in the freezer and then freeze a new batch of food.

### **Important recommendations for storing frozen food**

- Follow the manufacturer's instructions for the storage and use of frozen food. Take note of the recommended storage temperature and use-by date stated on the packaging.
- Use only food in undamaged packaging that has been stored at a temperature of -18 °C or lower.
- Do not buy food covered in frost. This indicates that the food has thawed or partially thawed several times and, as a result, is of inferior quality.
- Make sure that the food does not thaw during transport. An increase in its temperature will shorten the storage life and harm the quality of the food.

# Storing and freezing food

## Recommended storage times of frozen food in the freezer

Type of food	Storage life
Fruit, beef	10 to 12 months
Vegetables, veal, poultry	8 to 10 months
Venison	6 to 8 months
Pork	4 to 6 months
Finely chopped or minced meat	4 months
Bread, pastas, cooked dishes, whitefish	3 months
Offal	2 months
Smoked sausage, bluefish	1 month

## Thawing frozen food

- Thawing is an important step in storing food preserved by freezing. Food must be thawed in the correct way.
- Suitable methods of thawing food are:
  - in the refrigerator;
  - in cold water;
  - in a microwave or conventional oven with a suitable thaw program.
- Some frozen products can be prepared without needing to thaw them first. The manufacturer will state this on the packaging.
- The food needs to be packed in small portions. In this way the food thaws faster.
- Use partially or completely thawed food as quickly as possible. The bacteria in thawed food are reactivated and the food will spoil rapidly. This applies in particular to fruit, vegetables and ready-made food.
- Do not refreeze partially or completely thawed food.

## Defrosting the appliance

The modern Total NoFrost technology in the freezer compartment prevents the formation of ice and the accumulation of frost on foods, thus enabling economical operation, greater transparency and full use of space.

With the NoFrost system, you no longer need to defrost the freezer.

## Cleaning the appliance

### WARNING!

Switch off the appliance and remove the plug from the socket before you start cleaning it.

### WARNING!

Do not use abrasive cleaning agents, as they can damage the surface.

### INFORMATION!

Activate the intensive freezing function 24 hours before you plan to clean the freezer.

- Regularly clean the interior of the appliance with lukewarm water. If so required, add a neutral cleaning agent or special refrigerator cleaner to the water. Clean all surfaces with a soft cloth. Wipe the cleaned parts with a cloth with clean water and then dry them thoroughly.
- Do not put parts of the appliance in a dishwasher: this could damage them.

### WARNING!

When you are not going to use the appliance for a longer period then switch it off with the appropriate key and disconnect it from the mains. Empty, defrost and clean the appliance, and leave the door ajar.

# Faults

## Faults table

When you have any doubts about whether your appliance is working properly you should not immediately assume that it is defective. We recommend that you should in any case check the points in the following table.

Problem	Cause/Solution
Appliance is connected to the power mains but it does not work.	<ul style="list-style-type: none"><li>• Make sure there is voltage in the power outlet and that the appliance is switched on.</li></ul>
Appliance cools continuously for a long time.	<p>The compressor is operating for a longer time at low capacity (low energy consumption / high efficiency). This is the most efficient form of operation. The following factors can also influence the appliance's operation:</p> <ul style="list-style-type: none"><li>• The ambient temperature is too high.</li><li>• The door has been opened for too long or too frequently.</li><li>• The door is not properly closed.</li><li>• The door does not seal properly (the seal is dirty, the door is misaligned or the seal is damaged, etc.).</li><li>• Too much fresh food has been put in at the same time.</li><li>• Insufficient air circulation around the compressor and condenser. Check that the ventilation around the appliance is sufficient (see the separate installation instructions).</li></ul>
Excessive ice formation in the freezer.	<ul style="list-style-type: none"><li>• The door has been opened for too long or too frequently.</li><li>• The door is not properly closed.</li><li>• The door does not seal properly (the seal is dirty, the door is misaligned or the seal is damaged, etc.).</li></ul>
Door does not open easily.	<p>You are trying to open the appliance's door just after you have closed the door. Then opening the door is difficult. When you open the door, cold air escapes from the appliance and is replaced by warm air from the surroundings. As this air cools a slight vacuum is created that makes it more difficult to open the door. The situation returns to normal after a few minutes, and the door opens easily again.</p>
Appliance makes a noise.	<ul style="list-style-type: none"><li>• The appliance is cooled by a refrigeration system with a compressor (and with some models, also a fan) that makes a noise. The noise level depends on the installation of the appliance, its correct use and its age.</li><li>• When you connect the appliance to the power supply the noise made by the compressor or flowing refrigerant may be slightly louder. This is not indicative of a defect, and has no effect on the service life of the appliance. The appliance will make less noise after a while.</li><li>• The appliance may be temporarily noisier after the door has been opened for too long or too frequently, a large quantity of fresh food has been put in the appliance or the intensive freezing or intensive cooling function has been activated.</li></ul>

Table continued from last page

Problem	Cause/Solution
The display shows error code E0.	<ul style="list-style-type: none"> <li>• The touch keys do not respond. Call a service centre for repair.</li> <li>• Until the appliance is repaired by a service technician, the appliance will operate in safe mode. The appliance will automatically preserve the most suitable temperature for each compartment.</li> </ul>
The display shows error code E8.	<ul style="list-style-type: none"> <li>• The touch keys do not respond. Call a service centre for repair.</li> <li>• Until the appliance is repaired by a service technician, the appliance will operate in safe mode. The appliance will automatically preserve the most suitable temperature for each compartment.</li> </ul>
The display shows error code E9.	The door sensor is malfunctioning. Call a service centre for repair.
The display shows error code F1.	The freezer compartment fan is malfunctioning. Call a service centre for repair. The appliance cannot operate normally. Transfer the food to a cool place and switch off the appliance.
The display shows error code F2.	The condenser fan is malfunctioning. Call a service centre to fix the problem. The appliance cannot operate normally. Transfer the food to a cool place and switch off the appliance.
The display shows error code t2.	The temperature sensor of the freezer is malfunctioning. Call a service centre to fix the problem. The appliance will operate in safe mode until it is repaired by a service technician. The appliance will automatically maintain the most suitable temperature for each compartment.
The display shows error code t4.	Ambient temperature sensor is malfunctioning. Call a service center to fix the problem. The appliance will operate in safe mode until it is repaired by a service technician. The appliance will automatically maintain the most suitable temperature for each compartment.
The display shows error code L2.	The ambient light sensor is malfunctioning. Call a service centre for repair.
The display shows error code 81.	The WiFi module is malfunctioning. Call a service centre to fix the problem.

If you are unable to solve the problem then contact the service centre. When you do so, state the type, model and serial number shown on the type plate or label on the inside of the appliance.

# Environmental aspects

## Disposal of packaging and appliance

This appliance is made from sustainable materials. This appliance must be disposed of in a responsible manner at the end of its service life. Contact the local authorities for information about the method.

### INFORMATION!

See also the chapter 'Disposal' in the Safety instructions.

The packaging of the appliance is recyclable. The following materials may have been used:

- Cardboard.
- Polyethylene foil (PE).
- CFC-free polystyrene (hard PS foam).

These materials must be disposed of in a responsible manner and in accordance with government regulations.



The appliance is marked with a crossed out wheeled bin symbol to draw your attention to the requirement for the separate disposal of domestic electrical appliances. This means that the appliance may not be disposed of in unsorted household waste at the end of its service life. The appliance must be taken to a special municipal waste processing location for separated waste or to a dealer who provides this service.

Collecting and disposing of domestic appliances separately avoids detrimental consequences for humans and the environment. This ensures that the materials used to make the appliance can be recovered and that substantial savings in the use of energy and raw materials can be achieved.



### **Declaration of conformity**

We hereby declare that our products conform to the applicable European Directives, Regulations and requirements, as well as all requirements in the standards to which reference is made.

Radio equipment type:	MWB414C.07 MWB414S.12
<b>Wi-Fi</b>	
Operating frequency range:	2,412 GHz - 2,472 GHz
Maximum output power:	≤10 dBm/MHz ( EIRP) (Antenna gain 10 dBi)
Maximum antenna gain:	Gain: -1,53 dBi
<b>Bluetooth</b>	
Frequency range:	2,402 GHz - 2,480 GHz
Carrier Output:	4 dBm (≤10 dBm)
Emission type:	F1D

## Declaration of conformity

The company declares that the device with the function Connectlife complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. The detailed Declaration of Conformity can be found at the web address <https://auid.connectlife.io> on the page of your device among the additional documents.

# Spare parts

Functional spare parts for the purchased appliance will be available for at least 15 years from the date the last unit of the model was placed on the market. During this time, original spare parts will be available to ensure the correct operation of your appliance. A list of spare parts and repair tips in accordance with the current Ecodesign Directive can be found by scanning the QR code included with the appliance. Or on the following link: <https://auid.connectlife.io>.





The instructions for use can also be found on our website: [www.asko.com](http://www.asko.com)



951509-a4

