



mark the suspension point on your wall
drill holes and place the plugs, washers and screws

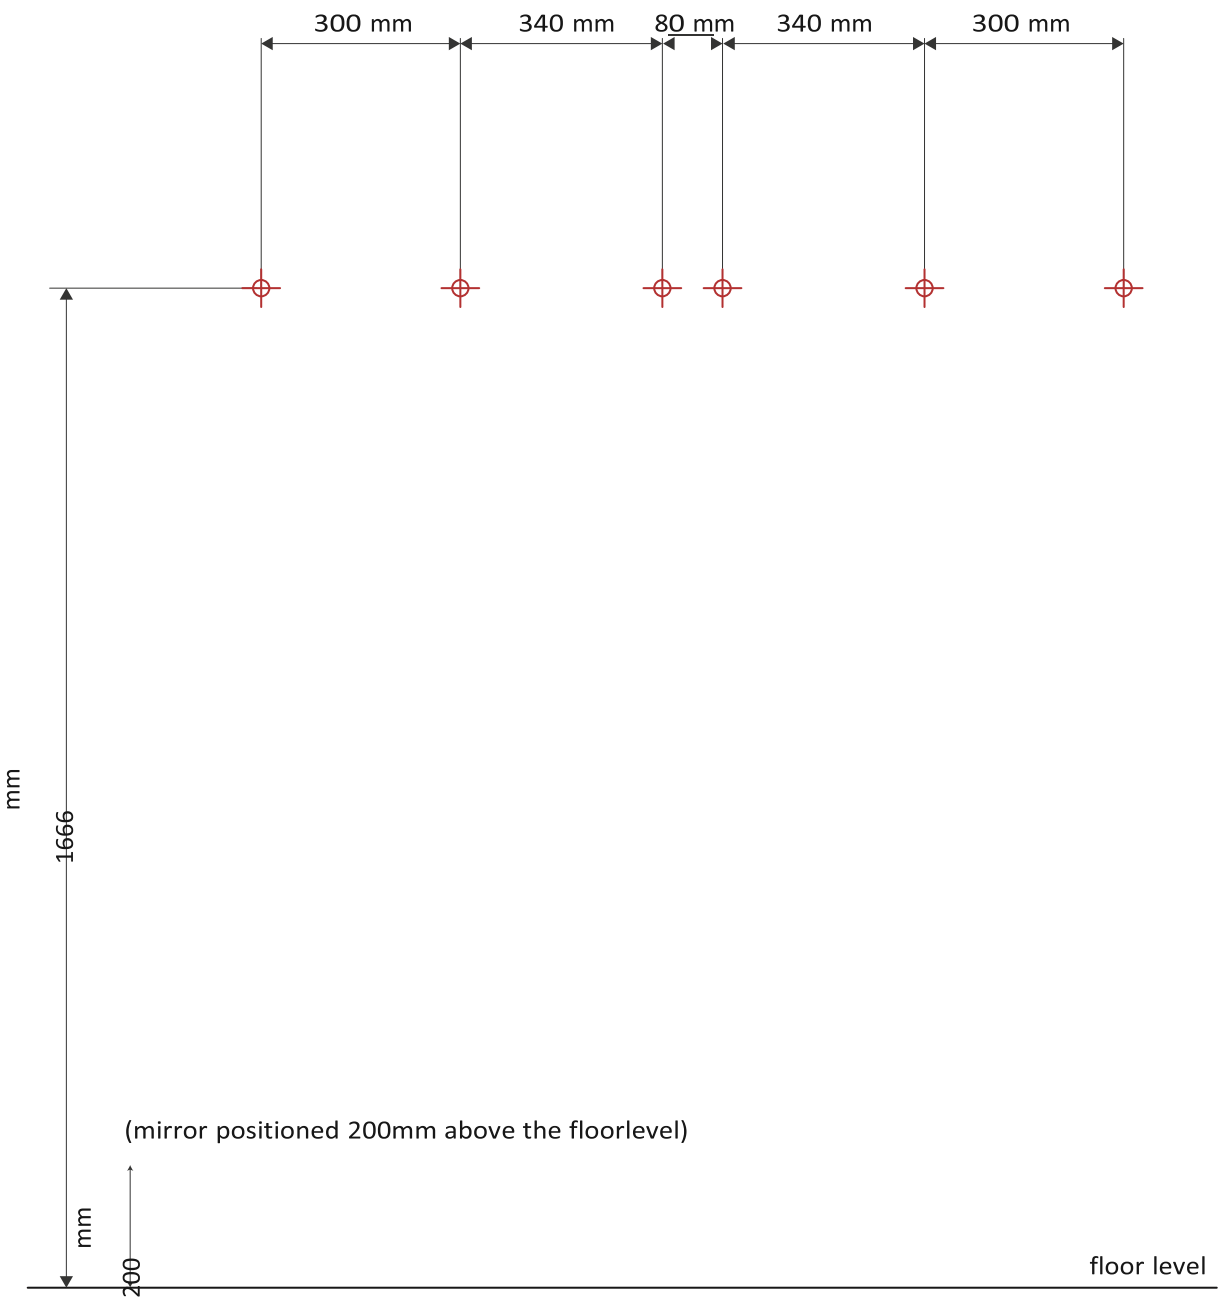

place the mirrors on the washers in the 'open' position
once all pieces are placed on the wall slide the left and right mirror toward the central mirror leave
a 5cm gap between the big mirrors in order to show the black mirror

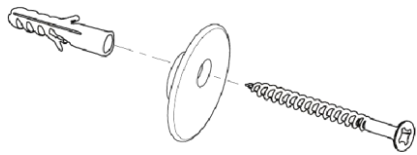